

PowerWalker PowerWalker VFI LICR IoT Series

USER MANUAL



Service and support:

Call your local service representative

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS. This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries.

UPS Tower models are considered acceptable for use in the ambient of $0 \sim 45^{\circ}\text{C}$;

UPS RT models are considered acceptable for use in the ambient of $0 \sim 40^{\circ}\text{C}$;

Certification standards

- Safety: IEC/EN 62040-1
- EMC: IEC/EN 62040-2
- Performance: IEC/EN 62040-3.
- ISO 9001:2015.
- ISO 14001:2015.

Special symbols



RISK OF ELECTRIC SHOCK- Observe the warning associated with the risk of electric shock symbol.



Important instructions that must always be followed.



EU separate collection and lead content mark for Lithium batteries. Indicates that the battery must not be disposed of to the 'normal' household waste but be separately collected and recycled.



EU separate collection mark for waste electrical and electronic equipment (WEEE). Indicates that the item must not be disposed of to the 'normal' household waste but be separately collected and recycled.



Information, advice, help.



Refer to the user manual.

Safety of persons

- Dangerous voltage levels are present within the system. It should be opened exclusively by qualified service personnel.
- The system must be properly grounded.
- The battery supplied with the system contains small amounts of toxic materials. To avoid accidents, the directives listed below must be observed:
 - Servicing of batteries should be performed or supervised by personnel knowledgeable about batteries and the required precautions.
 - Risk of explosion if battery is replaced by an incorrect type. When replacing batteries, replace with the same type and number of batteries or battery packs. Instructions shall

carry sufficient information to enable the replacement of the battery with a suitable recommended type.

- **CAUTION:** Do not dispose of batteries in a fire. The batteries may explode. Dispose of used batteries according to the instructions.
- Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- **CAUTION** – A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
 - Remove watches, rings, or other metal objects.
 - Use tools with insulated handles.
 - Wear rubber gloves and boots.
 - Do not lay tools or metal parts on top of batteries.
 - Disconnect charging source prior to connecting or disconnecting battery terminals.
 - Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance.
 - Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces.

Product safety

- The UPS connection instructions and operation described in the manual must be followed in the indicated order.
- UPS enclosure IP rating IP20.
- The upstream circuit breaker for Normal AC/Bypass AC must be easily accessible.
- for PERMANENTLY CONNECTED EQUIPMENT, a readily accessible disconnect device shall be incorporated external to the equipment
- for PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible
- Check that the indications on the rating plate correspond to your AC powered system and to the actual electrical consumption of all the equipment to be connected to the system.
- Never install the system near liquids or in an excessively damp environment.
- Never let a foreign body penetrate inside the system.
- Never block the ventilation grates of the system.
- Never expose the system to direct sunlight or source of heat.
- If the system must be stored prior to installation, storage must be in a dry place.
- The admissible storage temperature range is -25°C to +55°C without batteries, 0°C to +40°C with batteries, suggest to storage the battery below 25°C.
- This UPS can be used in TN/IT/TT power system

Special precautions

- The unit is heavy: wear safety shoes and use vacuum lifter preferentially for handling operations.
- All handling operations will require at least two people (unpacking, lifting, installation in rack system).
- Before and after the installation, if the UPS remains de-energized for a long period, the UPS must be energized for a period of 24 hours, at least once every 6 months (for a normal storage temperature less than 25°C). This charges the battery, thus avoiding possible irreversible damage.
- When replacing the battery module, it is essential to use the matching PowerWalker battery modules to ensure an identical level of performance and safety.



This is a category C2 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures.

Contents

1	Introduction.....	1
1.1	Electronic equipment protection	1
1.2	Environmental protection	2
2	Product Overview	3
2.1	Weight and Dimension	3
2.2	Rear panels	4
3	Installation.....	6
3.1	Inspecting the equipment	6
3.2	Checking the accessory kit	6
3.3	Install the Unit	7
3.4	Connecting the EBM(s).....	8
4	Operation	10
4.1	LCD panel	10
4.2	LCD description.....	11
4.3	Display functions	13
4.4	User settings	13
4.5	Starting the UPS with utility	15
4.6	Starting the UPS on Battery.....	15
4.7	UPS Shutdown	16
5	Communication	17
5.1	RS232 and USB	17
5.2	UPS remote control functions	17
5.3	IoT	18
5.4	Modbus TCP.....	19
5.5	Intelligent Card (Optional).....	19
5.6	UPS Management Software	20
6	UPS maintenance.....	22
6.1	Equipment care	22
6.2	Transporting the UPS.....	22
6.3	Storing the equipment	22
6.4	Replacing batteries	22
6.5	Recycle	24
7	Troubleshooting.....	25
8	Specifications.....	27
8.1	UPS Block Diagram	27
8.2	UPS Specification	27

1 Introduction

Thank you for selecting PowerWalker VFI LICR IoT UPS to protect your electrical equipment. We recommend that you take the time to read this manual to take full advantage of the many features of the UPS (Uninterruptible Power System).

Before installing the UPS, please read the booklet presenting the safety instructions. Then follow the indications in this manual.

1.1 Electronic equipment protection

The UPS protects your sensitive electronic equipment from the most common power problems, including power failures, power sags, power surges, brownouts, line noise, high voltage spikes, frequency variations, switching transients, and harmonic distortion.

Special characteristic:

- Double converter with pure sine waveform output
- Full digital control
- Higher power density, and output PF = 1
- Wider input voltage range: 110Vac~300Vac
- Higher efficiency: up to 91%~94% for 1-3k
- Input THDI<5.5%
- EBM quantity auto detection
- Communication ports: RPO, Dry in, Dry out, intelligent slot, USB, RS232
- IoT: Ethernet(default) and Wireless (Optional)
- Dot-matrix LCD, it supports Multi-Language
- ECO Mode
- Start-able without battery.

1.2 Environmental protection

Products are developed according to an eco-design approach.

Substances

This product does not contain CFCs, HCFCs or asbestos.

Packing

To improve waste treatment and facilitate recycling, separate the various packing components.

- The cardboard we use comprises over 50% of recycled cardboard.
- Sacks and bags are made of polyethylene.
- Packing materials are recyclable and bear the appropriate identification symbol.

Follow all local regulations for the disposal of packing materials.

Product

The product is mainly made up of recyclable materials.

Dismantling and disassembly must take place in compliance with all local regulations concerning waste. At the end of its service life, the product must be transported to recycling centers, re-use and treatment facilities for waste electrical and electronic equipment (WEEE).

Battery

The product contains lithium batteries that must be processed according to applicable local regulations concerning batteries.


The battery may be removed to comply with regulations and in view of correct disposal.

2 Product Overview

2.1 Weight and Dimension

The weights in this table is reference only, please see the labels on the carton for details.


RT models

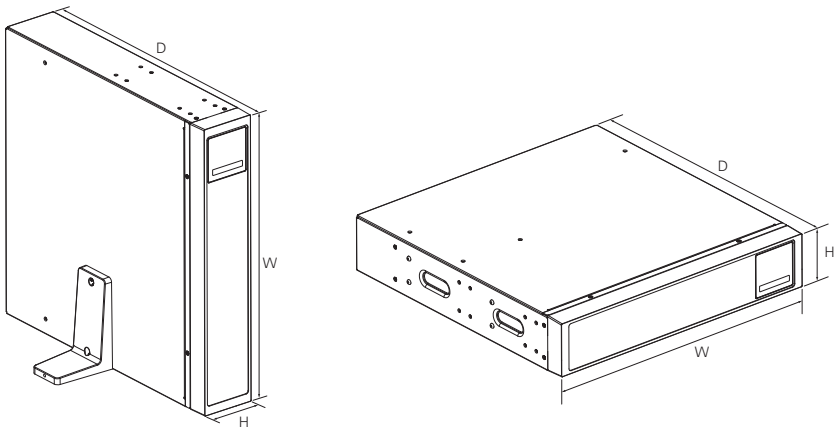


Description	Net Weights (kg)	Dimensions: D x W x H (mm)
RT 1K	14.95	445*438*85.5
RT 1.5K	15.2	445*438*85.5
RT 2K	21.1	600*438*85.5
RT 3K	21.45	600*438*85.5
RT 48V EBM	12.0	445*438*43
RT 76.8V EBM	17.4	600*438*43

2.2 Rear panels


RT 1K/1.5k

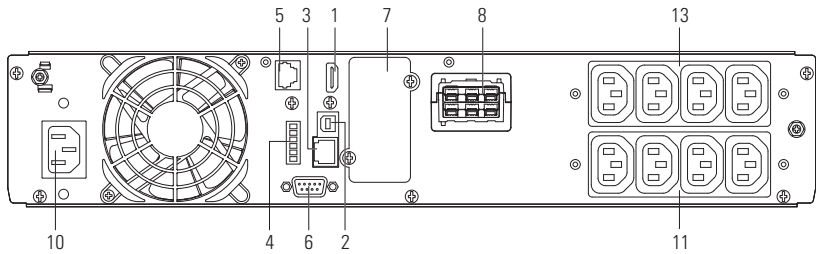

RT 2K

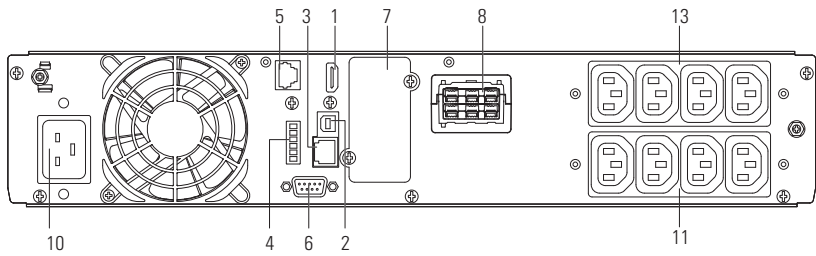

RT 3K

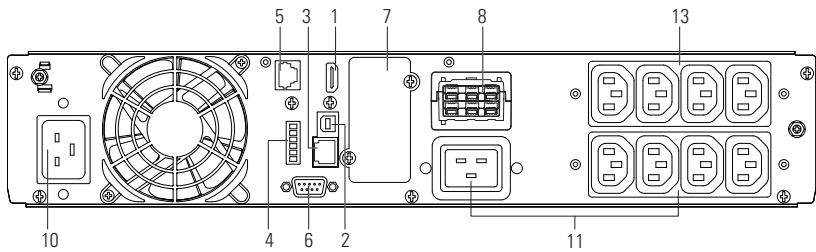

RT 36V& 72V EBM



1	WLAN(HDMI)	2	USB	3	Ethernet (RJ45)
4	RPO/Dry in/Dry out	5	EBM auto detection	6	RS232
7	Slot Card Box	8	EBM Connector	9	Input Breaker(optional)
10	Input Socket/ Input Terminal	11	Output Socket/ Output Terminal	12	Output Fuse (optional)
13	Programmable Output Socket				

3 Installation

3.1 Inspecting the equipment


If any equipment has been damaged during shipment, keep the shipping cartons and packing materials for the carrier or place of purchase and file a claim for shipping damage. If you discover damage after acceptance, file a claim for concealed damage.

To file a claim for shipping damage or concealed damage:

1. File with the carrier within 15 days of receipt of the equipment;
2. Send a copy of the damage claim within 15 days to your service representative.

3.2 Checking the accessory kit

RT model

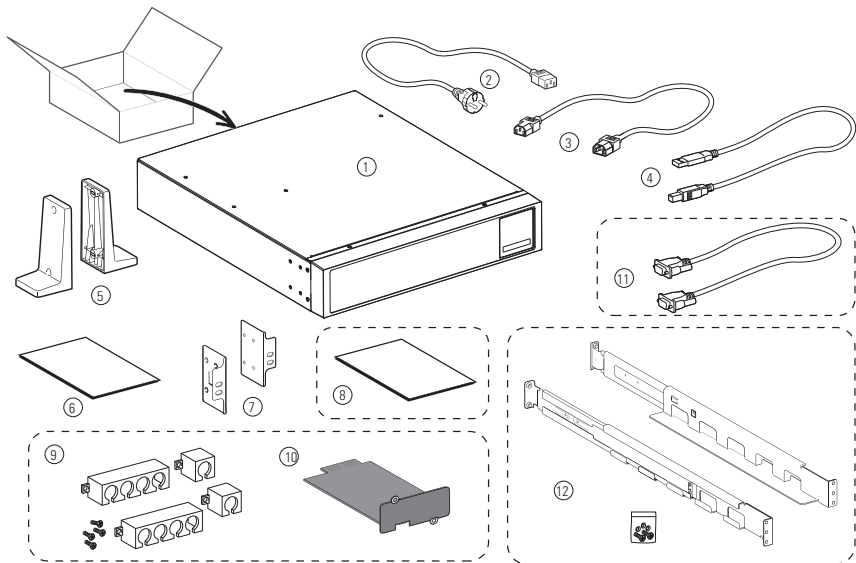

1	UPS	2	Input cable	3	Output cables
4	USB cable	5	Tower stands	6	User manual (English)
7	Rack ears	8	User manual	9	Cable lockers (optional)
10	Slot card (optional)	11	RS232 cable (optional)		
12	Rail kit (optional)				


3.3 Install the Unit



Always keep 200 mm of free space behind the UPS rear panel.



Check that the indications on the name plate located on the top cover of the UPS meets to the AC-power source and the true electrical consumption of the total load.

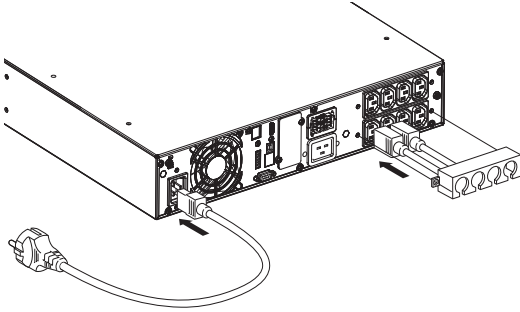

1. Connect the UPS input socket to the AC-power source using the cable of the protected equipment.

2. Connect the loads to the UPS using the cables.



Note: The UPS charges the battery as soon as it is connected to the AC-power source, even if button is not pressed.


Once the UPS is connected to the AC-power source, 8 hours of charging are required before the battery can supply the rated backup time.




When the cables connected to terminal block, the inner copper wire must not be exposed to avoid the risk of electric shock.





● Rack installation

Follow steps 1 to 4 for module mounting on the rails.

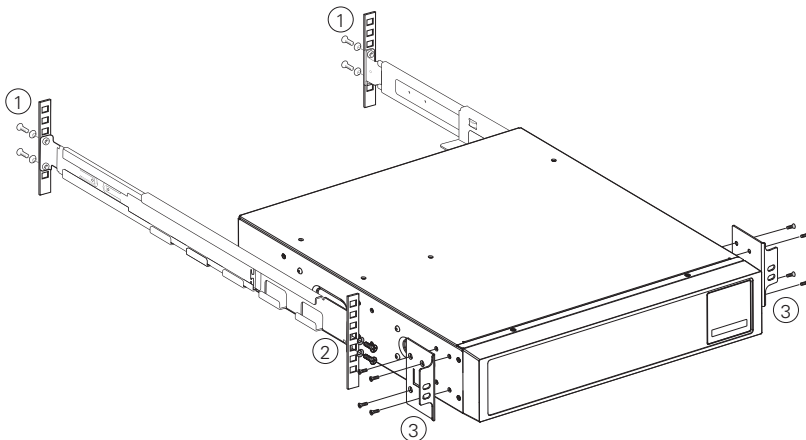

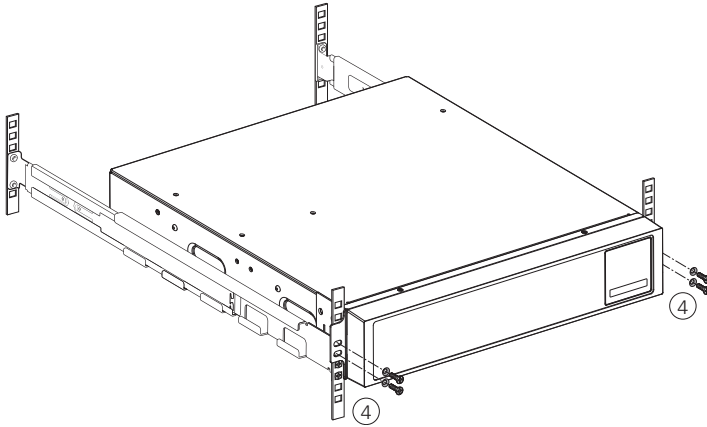

● Tower installation

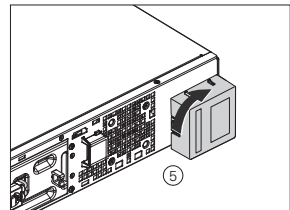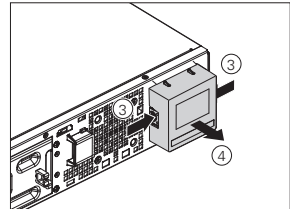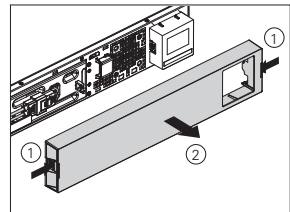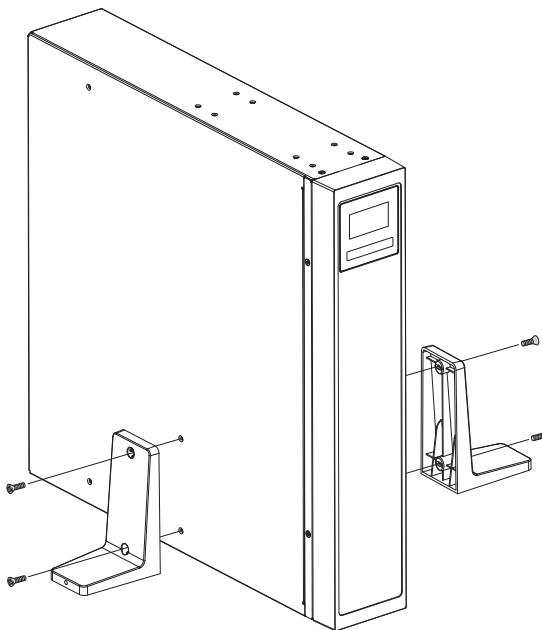



3.4 Connecting the EBM(s)



A small amount of arcing may occur when connecting an EBM to the UPS. This is normal and will not harm personnel.

Up to 4 EBMs can be connected to the UPS.

3.4.1 RT models

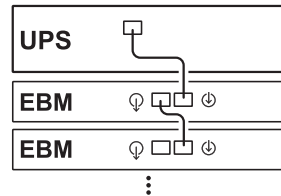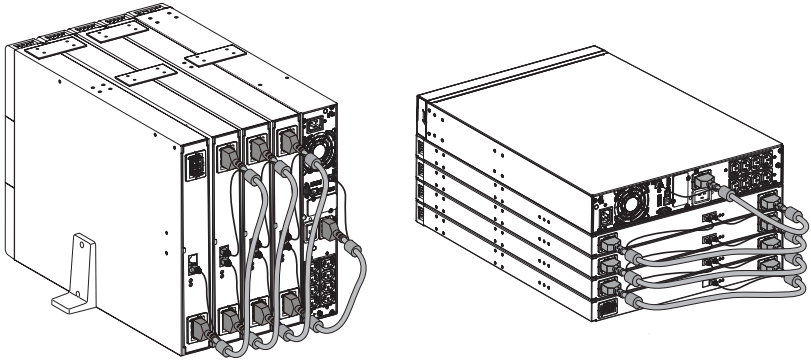

While connecting battery:

10134075: Only compatible with UPS VFI 1000 LICR IoT and VFI 1500 LICR IoT

10134076: Only compatible with UPS VFI 2000 LICR IoT and VFI 3000 LICR IoT

Make sure that the Ethernet cables are connected correctly

(see figure above).


If the UPS does not recognize the battery pack when connecting / disconnecting or there is a nBMS error, activate the “BMS Auto Setup” function via the LCD display.

To do this, select the “Control” menu, then “BMS Auto Setup” and click on “OK”. The UPS will then recognize the compatible battery pack.





4 Operation

4.1 LCD panel

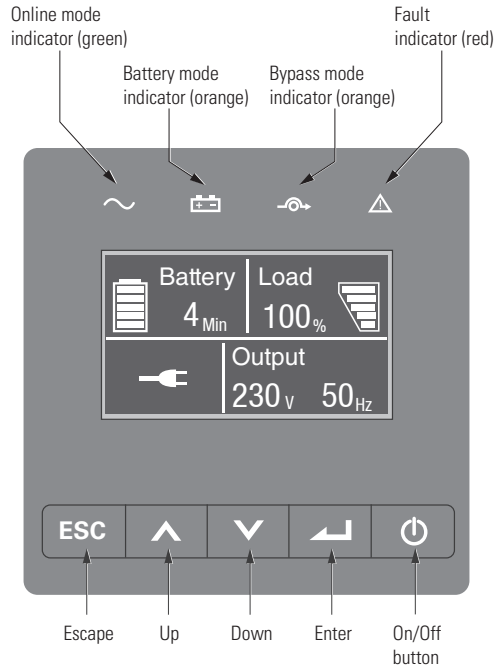




The UPS provides useful information about the UPS itself, load status, events, measurements and settings.



The following table shows the indicator status and description:


Indicator	Status	Description
 Green	On	The UPS is operating normally on Online or on High Efficiency mode.
 Yellow	On	The UPS is on Battery mode.
 Yellow	On	The UPS is on Bypass mode.
 Red	On	The UPS has an active alarm or fault. See Chapter 7 troubleshooting for additional information.









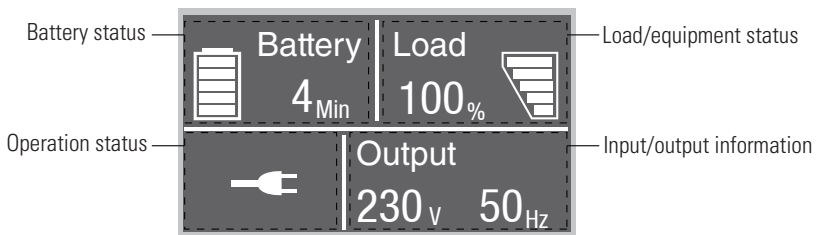


The following table shows the indicator status and description:

The button	Function	Illustration
	Power on	Press the Button for >100ms & < 1s can power on the UPS without utility input at the condition of battery connected
	Turn on	When the Unity is powered on, press the button for >1s can turn on the UPS
	Turn off	Press the button > 3s can turn off the UPS
	Scroll up	Press to Scroll up the menu option
	Scroll down	Press to Scroll down the menu option
	Enter menu	Select/Confirm the current selection
	Exit the present menu	Press to exit present menu to Main menu or the higher-level menu without changing a setting
	Mute buzzer	Press the button to mute the buzzer temporarily, once new warning or fault is active, buzzer will work again

4.2 LCD description

The LCD backlight automatically dims after 10 minutes of inactivity. Press any button to restore the screen.



Operation status	Cause	Description
	Standby mode	The UPS is Off without output.
	Online mode	The UPS is operating normally and protecting the equipment.
 1 beep every 4 seconds	Battery mode	A utility failure has occurred, and the UPS is powering the equipment with battery. Prepare your equipment for shutdown.
 1 beep every 1 seconds	Battery mode with battery low	This warning is approximate, and the actual time to shutdown may vary significantly.
	High Efficiency mode	Once the mains are loss or abnormal, the UPS would transfer to Line mode or Battery mode and the load is supplied continuously.
	Converter mode	The UPS would free run with fixed output frequency (50Hz or 60Hz). The load should be derating to 60% in converter mode.
	Bypass mode	Overload or fault has occurred, or a command has been received, and the UPS is in Bypass mode.
	Battery test	UPS is executing a battery test
	Battery fail	The UPS detects bad battery or battery disconnected
	Overload	Some unnecessary loads should be cut off to reduce the load.
	Fault mode	Some fatal problems happened.

4.3 Display functions

When starting the UPS, the display is in the default UPS status summary screen.

Main menu	Submenu	Display information or Menu function
UPS status		UPS mode, IoT status, date/time, battery status and current alarms
Event log		Displays the events and faults stored
Measurements	Load	Load information
	In /Out	Input/Output voltage and frequency
	Battery	Battery information
	DC Bus	DC Bus voltage
	Ambient Temperature	Temperature
	BMS Information ^[1]	Internal battery and EBM information
Control	Go to Bypass	Transfers the UPS on Bypass mode
	Load segment	Load segment on/off
	Start battery test	Starts a manual battery test
	Reset fault state	Clear active fault
	BMS Auto Setup ^[2]	Number of re-identified BMS
	Reset event list	Clear events and faults
	Reset com card	Reset com card inside UPS
	Restore factory settings	Restore to default factory settings
Settings		Refer to chapter 4.4 User settings
Identification	UPS Information	Product name, Serial number, firmware version
	IOT Information	IP/MAC address

[1] BMS information include voltage, current, SOC, SOH, battery capacity, BMS Firmware version of all batteries.

[2] BMS auto setup, UPS will automatically identify the connected lithium battery only when it is powered on , and keep communicating with them. If the number of BMS changes after UPS is powered on, you need to select the "BMS auto setup" option under the LCD control menu to re-identify the number of BMS, otherwise it will affect the estimate of the actual discharge time.

4.4 User settings

Submenu	Available settings	Default settings
language	English, Italiano, Français, Deutsch, Español, Русский, Polski, 简体中文	English
User password	[enabled, ****], [disabled]	Enabled(4732)
Audible alarms	[enabled], [disabled]	enabled
Output voltage	[200V], [208V], [220V], [230V], [240V]	[230V] [240V] for AU

Submenu	Available settings	Default settings
Output frequency	[autosensing], [converter 50Hz, 60Hz]	autosensing
High efficiency mode	[disabled], [enabled]	disabled
Auto bypass	[disabled], [enabled]	disabled
Load segment	[Auto start delay], [Auto shutdown delay]	Load segment delay time
Start/Auto restart/Start from bypass	[disabled], [enabled]	Cold start/Auto restart: enabled Start from bypass: disabled
Site wiring fault	[enabled], [disabled]	disabled
Overload pre-alarm	[50%~105%]	105%
Dry in signal	[Disabled], [Remote on], [Remote off], [Forced bypass]	
Dry out signal	[load powered], [on bat], [Low bat], [bat open], [bypass], [ups ok]	bypass
Ambient temperature alarm	[enabled], [disabled]	enabled
Battery remaining time	[enabled], [disabled]	enabled
Date and time	dd/mm/yyyy hh:mm	01/01/2020 00:00
LCD contrast	[-10 ~ +10]	[0]
Modbus TCP	[enabled], [disabled]	disabled
IoT	[enabled], [disabled]	disabled




If the load type is a transformer type, it is recommended to enable the “start from bypass” function.

It is recommended that you change your password when using.


4.5 Starting the UPS with utility

Before the initial launch, please make sure the battery and BMC cables are connected before pressing the ON/OFF button.

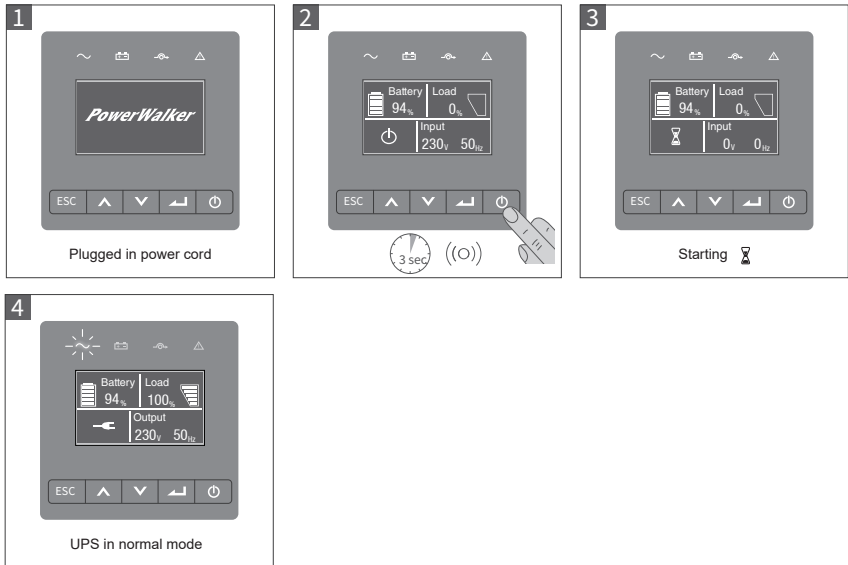


4.6 Starting the UPS on Battery

i Before using this feature, the UPS must have been powered by utility power with output enabled at least once. If this is the initial UPS startup, please make sure the battery and BMS cables are connected before pressing the ON/OFF button. Battery start can be disabled. Refer to the Chapter [4.4 User setting](#)

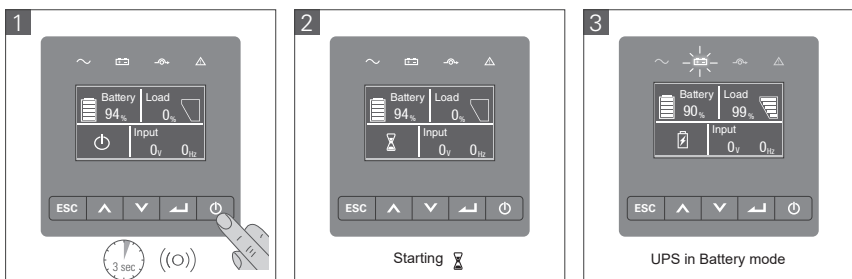

4.7 UPS Shutdown

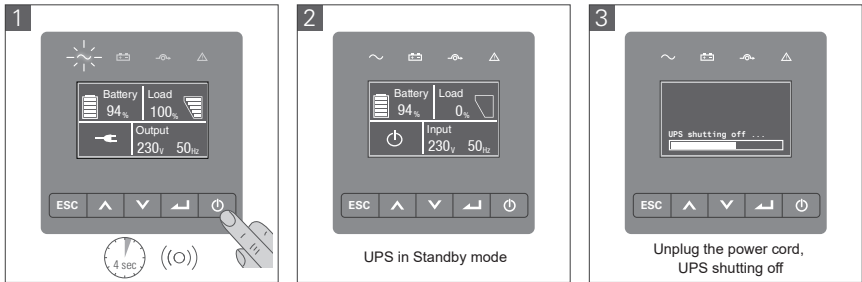

5 Communication

5.1 RS232 and USB

1. Communication cable to the serial or USB port on the computer.
2. Connect the other end of the communication cable to the RS232 or USB communication port on the UPS.

5.2 UPS remote control functions


- **Remote Power Off (RPO)**

When RPO is activated, UPS will cut off output immediately, and continues to alarm.

RPO	Comments
Connector type	16 AWG Maximum wires
External breaker specification	60 V DC/30 V AC 20 mA max

- **Dry in**


Dry in function can be configured (see Settings > Dry in)

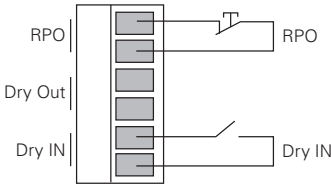

Dry in	Comments
Connector type	16 AWG Maximum wires
External breaker specification	60 V DC/30 V AC 20 mA max

- **Dry out**

Dry out is the relay out, dry out function can be configured (see Settings > Dry out).

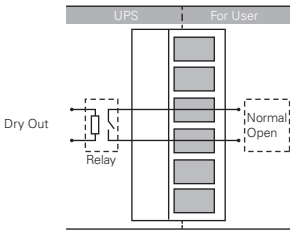

Dry out	Comments
Connector type	16 AWG Maximum wires
Inner Relay specification	24Vdc/1A

5.3 IoT


Built-in ethernet port and WLAN (optional accessory) port enable market-leading and easy-to-use IoT solutions for:

- Winpower View mobile app which allows you to remote monitor UPS(s) and keep informed about critical UPS event always.
- Remote report UPS faults and status (contact with your service for detail) from APP or registered APP account (Email address).
- Automatic UPS and battery warranty alert from APP or registered APP account (Email address).

IoT Connection

- Wired connection

1. Connect UPS and router or switch with network cable

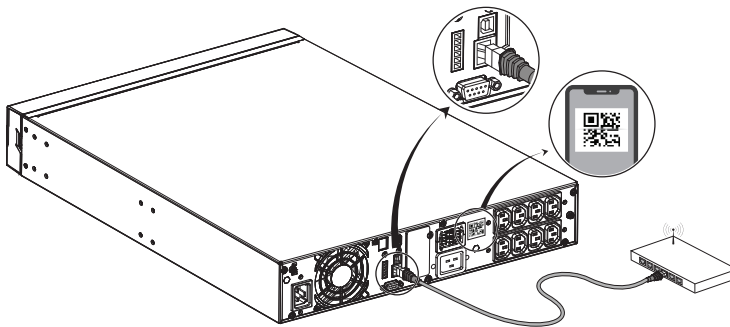


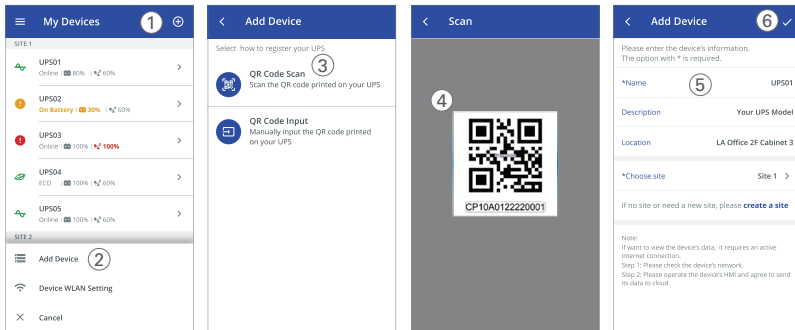
Please use CAT6 shielded network cable.



The Position of QR code on the UPS is for reference, subject to the actual UPS label.

Make sure your IT settings can access the public network and Microsoft Azure Cloud.

2. Enable the IoT function in LCD (see Settings-> IoT)
3. Search the "WinPower View" from Google Play store or Apple APP store, downloading and installing.
4. Open the app, register an account, log in, follow the instructions of the app.
5. Tap  on the upper right corner, scan the SN barcode on UPS label to add device.



i For more detail information and Q&A about the IoT and APP, please refer to the HELP menu in the app.

- Wireless connection

The wireless module is optional, please contact your local distributor for details.

5.4 Modbus TCP

Built-in ethernet port offers Modbus TCP feature to facilitate remote monitoring of the UPS into your own software. Contact with your service for protocol details.

5.5 Intelligent Card (Optional)


Intelligent Card allow the UPS to communicate with different types of devices in variety of networking environments. The PowerWalker VFI LICR IoT series could use the following connectivity cards, please contact your local distributor for details.

- NMC Card- Ideal monitoring solution enables user to monitor and control the status of UPS on web browser via internet.
- CMC card -provides connection to Modbus protocol with standard RS485 signal.
- AS400 G2 card - Provides voltage-free dry-contact signals for programmable controller and management system.
- EMP - Supports temperature and humidity sensors for remote environment monitoring, should work with NMC Card.

5.6 UPS Management Software

5.6.1 WinPower

WinPower provides user-friendly interface to monitor and control your UPS. This unique software provides safely auto shutdown for multi-computer systems while power failure. With this software, users can monitor and control any UPS on the same LAN no matter how far from the UPSs.

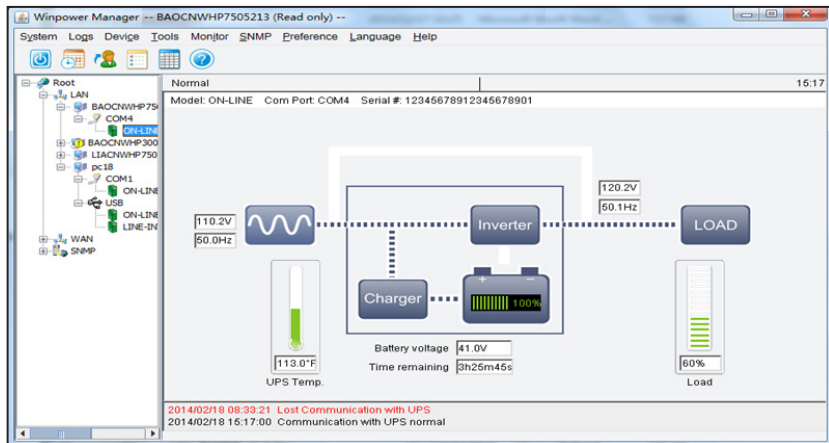



Installation procedure:

1. Go to the website: <http://www.ups-software-download.com>
2. Choose the operation system you need and follow the instruction described on the web-site to download the software.
3. When downloading all required files from the internet, enter the serial No: **511C1-01220-0100-478DF2A** to install the software.


When you finish installation, restart your computer, the WinPower software will appear as a green plug icon located in the system tray, near the clock.

5.6.2 WinPower View APP

WinPower View is a mobile app which allows you to centralized monitoring UPS(s) con-nected to cloud. Please download it from Google Play store or Apple App store. Please refer to the [chapter 5.3](#) for IoT connection.

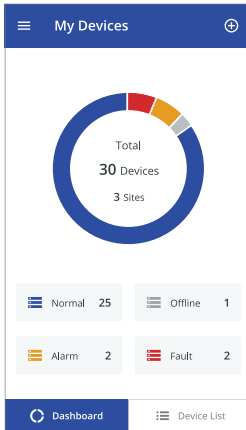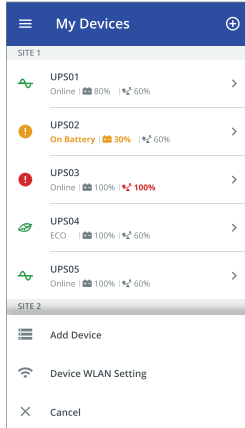
My Devices	
SITE 1	
UPS01	Online 80% 60%
UPS02	On Battery 30% 60%
UPS03	Online 100% 100%
UPS04	ECO 100% 60%
UPS05	Online 100% 60%
SITE 2	
Add Device	
Device WLAN Setting	
Cancel	

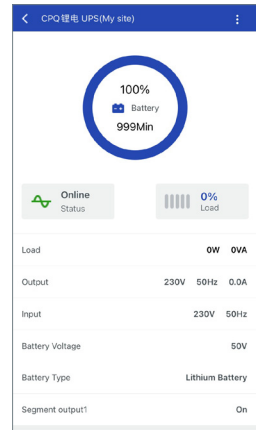


6 UPS maintenance

6.1 Equipment care

For the best preventive maintenance, keep the area around the equipment clean and dust free. If the atmosphere is very dusty, clean the outside of the system with a vacuum cleaner. For full battery life, keep the equipment at an ambient temperature of 25°C (77°F).

-  The batteries are rated for 8 years service life. The length of service life varies, depending on the frequency of usage and ambient temperature. Batteries used beyond expected service life will often have severely reduced runtimes. Replace batteries at least every 4 years to keep units running at peak efficiency.



6.2 Transporting the UPS

-  Please transport the UPS only in the original packaging. If the UPS requires any type of transportation, verify that the UPS is disconnected and turned off.






6.3 Storing the equipment

If you store the equipment for a long period, recharge the battery every 6 months by connecting the UPS to utility power. However, recommends that the batteries charge for 48 hours after long-term storage. Check the battery recharge date on the shipping carton label. If the date has passed and the batteries were never recharged, do not use them. Contact your service representative.

6.4 Replacing batteries

-  DO NOT DISCONNECT the batteries while the UPS is in Battery mode. Consider all warnings, cautions, and notes before replacing batteries.
-  • Servicing should be performed by qualified service personnel with knowledgeable of batteries and required precautions. Keep unauthorized personnel away from batteries.

- Replacing the internal battery (For RT)

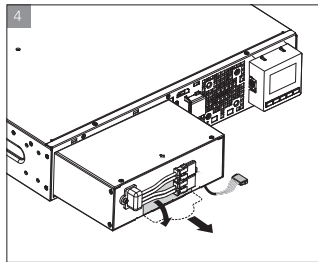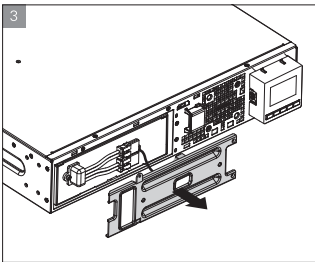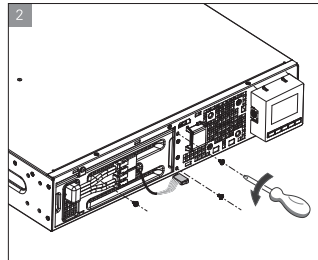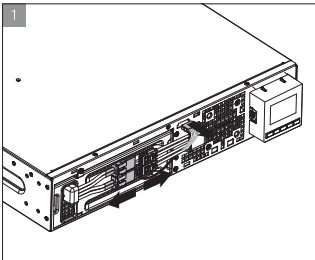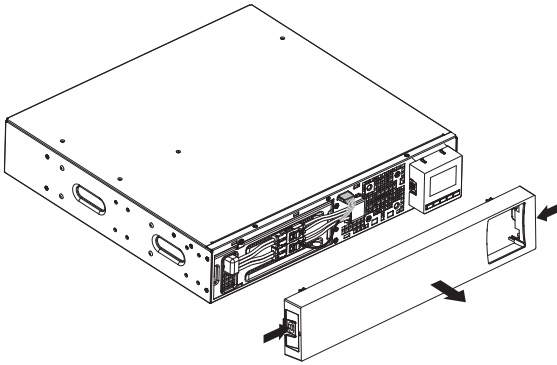

1. Put the new battery pack into the UPS.
2. Screw back the metal protection covers and the front panel.
3. Test new batteries.
4. If there is a BMS error on the LCD screen, please enable the IoT feature (4732). Next restart the UPS and / or restore the UPS to factory settings.



Verify that the replacement batteries have the same rating and brand as the batteries being replaced.

6.5 Recycle

Contact your local recycling or hazardous waste center for information on proper disposal of the used equipment.



Do not dispose of the batteries in the fire. Which may cause battery explosion. The batteries must be rightly disposed according to local regulation.

Do not open or destroy the batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.



This symbol indicates that you should not discard the UPS or the UPS batteries in the trash.

This product contains sealed, Lithium-Ion batteries and must be disposed of properly. For more information, contact your local recycling/reuse or hazardous waste center.



This symbol indicates that you should not discard waste electrical or electronic equipment (WEEE) in the trash. For proper disposal, contact your local recycling/reuse or hazardous waste center.

7 Troubleshooting



Typical alarms and faults:

To check the UPS status and Event log:

1. Press any button on the front panel display to activate the menu options.
2. Press the button to select Event log.
3. Scroll through the listed events and faults.


The following table describes typical conditions.

Conditions	Possible cause	Action
Battery mode  LED is On. 1 beep every 4 seconds.	A utility failure has occurred, and the UPS is in Battery mode.	The UPS is powering the equipment with battery power. Prepare your equipment for shutdown.
Battery low  LED is On. 1 beep every second.	The UPS is in Battery mode and the battery is running low.	This warning is approximate, and the actual time to shutdown may vary significantly. Depending on the UPS load and the number of EBMs(Extended Battery Modules), an alarm may occur before the battery capacity reaches 20 percent.
No battery  LED is On. Beep continuous.	The batteries are disconnected.	Make sure all batteries are properly connected, if the problem persists, contact your service representative.
Battery fault  LED is On. Beep continuous.	The battery test is failed due to bad or disconnected batteries.	Make sure all batteries are properly connected, if the problem persists, contact your service representative.
The UPS does not provide the expected backup time.	The batteries need charging or service.	Apply utility power for 48 hours to charge the batteries. If the condition persists, contact your service representative.
Bypass mode  LED is on.	An overload or a fault has occurred, or a command has been received and the UPS is in Bypass mode.	Equipment is powered but not protected by the UPS. Check for one of the following alarms: overtemperature, overload, UPS failure or auto bypass setting.

Conditions	Possible cause	Action
<p>Power overload</p>  <p>LED is On.</p>	Power requirements exceed the UPS capacity (greater than 100% of nominal);	Remove some of the equipment from the UPS. The alarm resets when the condition becomes inactive.
<p>over temperature warning</p>  <p>LED is On. 1 beep every second.</p>	The UPS internal temperature is too high. At the warning level, the UPS generates the alarm but remains in the current operating state.	If the UPS is switched to bypass mode, the UPS will resume normal operation when the temperature is 5°C below the alarm temperature. If the fault persists, turn off the UPS. clear the vents and remove all heat sources. Allow the UPS to cool. Ensure that airflow around the UPS is not restricted. restart the UPS. if the problem persists, contact a service representative.
The UPS does not start.	The input source is not connected correctly.	Check the input connections.
	The Remote Power Off (RPO) switch is active or the RPO connector is missing.	If the UPS Status menu displays the "Remote Power Off" notice, inactivate the RPO input.
Emergency power off	RPO is active	1.Check the RPO connector status 2.Reset the RPO fault through LCD. Main menu – Control- Reset fault state.
Fan fault	Fan abnormal	Check if the fan is running normally
Site fault	Phase and neutral conductor at input of UPS system are reversed	Site Fault detection disabled by default. It can still be enabled / disabled from the LCD settings menu. Reconnect all input wires.
Over temperature fault	Over temperature is too high, UPS goes to bypass or stopped.	Check the ventilation of the UPS and check the ambient temperature.
Output short circuit	Output short circuit occurred	Check the output of UPS and loads, make sure the short circuit is removed before turning on again.
APP cannot connect to UPS	IoT is disabled	Enable IoT function in LCD
	Your IT settings may block UPS get cloud connected (NTP, Proxy, etc.)	please refer to Winpower View app help file

8 Specifications

8.1 UPS Block Diagram

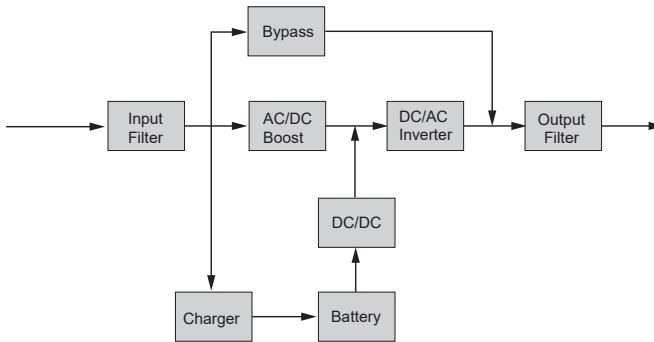

8.2 UPS Specification

Model name		1K	1.5k	2K	3K
Power rating	VA/Watt	1000VA/1000W	1500VA/1500W	2000VA/2000W	3000VA/3000W
Efficiency	Line mode	up to 91.3%	up to 92.1%	up to 93.8%	up to 94.3%
	ECO mode	up to 97.1%	up to 98.2%	up to 97.8%	up to 98.4%
Input performance	Voltage range	160-300V 100% load, 110-160V derating to 50% load linearly			
	Rated frequency	50Hz/60Hz			
	Frequency range	40Hz-70Hz (45Hz-55Hz, 54Hz-66Hz @ load>60%)			
	PF	>0.99			
	THDI	<5.5%		<5%	<5%
Input connection	Socket (RT)	1x IEC C14		1x IEC C20	
Output performance	Rated voltage	200/208/220/230/240 VAC (derating 10% at 208V, derating 20% at 200V)			
	Rated frequency	50Hz/60Hz			
	Maximum PF	PF = 1			
	Voltage accuracy	±1%			
	THDV	<1% linear load; <4% nonlinear load			
	Transfer time	0ms@line <-> battery; 4ms @ line <-> bypass; 10ms @ ECO <-> Inverter			
	Crest Ratio	Max 3:1			
	Overload	100%<load≤105% continuous. 105%< load ≤125% for 5 minutes 125%<load≤150% for 30 seconds. >150% for 500ms.			
Output connection	Socket	1 main outlet group (with 4 x IEC C13) 1 programmable outlet group (with 4 x IEC C13)			1 main outlet group (with 1 x IEC C19 + 4 x IEC C13) 1 programmable outlet group (with 4 x IEC C13)
	Load segment control	1 programmable load segment control			

Model name		1K	1.5k	2K	3K
Short-circuit current (RMS) /protect time	Bypass mode	550A/2.8ms		699A/7ms	699A/7ms
	Normal/Battery mode	20A/100ms		36A/100ms	54A/100ms
Battery	Voltage	48VDC		76.8VDC	76.8VDC
	Capacity (AH)	9Ah		9Ah	9Ah
	Material	Lithium iron phosphate (Li-FePO4)			
Maximum EBM quantity		4			
EBM auto detection		Yes			
Battery Hot swappable		Yes			
Charger	Charging method	BMS			
	Charging current	1.5A		1.5A	1.5A
	Recharging time	3.7h to 90%		4.6h to 90%	4.6h to 90%
Other mode	CVCF	Yes (derating to 60% load)			
HMI	Display	Dot matrix LCD (optional segment LCD)			
	Language	Multi-Language			
	USB	USB 2.0 with HID power device			
	RS232	Yes (DB9)			
	Dry in/out	1 programmable dry in; 1 programmable dry out			
	RPO	Yes			
	Intelligent slot	Yes (for long card)			
	Network card	Optional, NMC long card			
	Modbus card	Optional, CMC Long Card			
	Dry contactor card	Optional, AS400 Long Card			
	Wireless module	Optional			
	IOT Ethernet port	RJ45			
	Monitor software	Winpower, Winpower View APP			
Physical performance	Dimension (W*D*H) mm	438*445*85.5(2U)		438*600*85.5(2U)	
	IP protection level	IP20			
	Plug solid	Optional			
	Wheel	No			
Environment	Operating temperature	0-40°C			
	storage temp	0 to 40°C (32 to 104°F) with batteries -25 to 55°C (5 to 140°F) without batteries			
	Relative Humidity	0-95%			
	Operating Altitude	0~3000m (the load derating 1 % every up 100m @1000~3000m)			
	Acoustic Noise	<45dB at front 1m		<50dB at front 1m	
Certification	UPS	CE/CB,IEC62040, UN38.3			
	EBM	IEC62619,UN38.3,UL1973 compliant			
EMI	Conduction /Radiation	C2			
EMS	ESD	IEC/EN 61000-4-2			
	RS	IEC/EN 61000-4-3			
	EFT	IEC/EN 61000-4-4			
	Surge	IEC/EN 61000-4-5			

Model name		1K	1.5k	2K	3K
Accessory	Input power cable	Yes			
	Output power cable	Yes			
	EBM cable	Yes (in EBM)			
	USB cable	Yes			
	RS232 cable	Optional			
	Rail kit	Optional			
	Tower Feet	Yes			
	Rack ear	Yes			
	Manual (English)	Yes			

