

## TECHNICAL SPECIFICATION

USB	
Signal Type	USB 2.0, 1.1, and 1.0 w/ internal hub
CPU Ports	(4) USB Type B (female)
User Control Interface	(2) USB Type-A for KM connection only; (2) USB Type-A for USB 2.0 transparent
CONTROL	
Front Panel	Buttons
RS-232	Via control @ 115200 bps
Hot Keys	Via keyboard
Mouse	PASS Technology and Mouse Gesture Switching
OTHER	
Power Adapter	External 100-240 VAC/5VDC2A @ 24W
Dimensions	12.57" W x 1.76" H x 6.69" D
Weight	4.2 lbs
Approvals	UL, CE, ROHS Compliant
Operating Temp.	+32 to +104 °F (0 to +40 °C)
Storage Temp.	-4 to 140 °F (-20 to +60 °C)
Humidity	5 to 90% (No Condensation)
Emulation	Keyboard and Mouse

## WHAT'S IN THE BOX

PART NO.	Q-TY	DESCRIPTION
SKM-04-PLUS	1	4-Port KM Switch with USB 2.0 Sharing
PS5VDC2A	1	5VDC 2A Power Supply
Quick Start Guide	1	

## NOTICE

The information contained in this document is subject to change without notice. SmartAVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose. SmartAVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SmartAVI Technologies, Inc.



888.994.7427, 702.800.0005

2455 W Cheyenne Ave, Suite 112  
North Las Vegas, NV 89032

[SmartAVI.com](http://SmartAVI.com)

**Smart-AVI**  
SMART AUDIO VIDEO INNOVATION

# SKM-04-PLUS

**4-Port KM Switch  
with USB 2.0 with LAN**



**MANAGE KEYBOARD AND  
MOUSE OPERATIONS  
ON FOUR COMPUTERS  
FROM A SINGLE WORKSTATION  
WITH SUPPORT FOR USB 2.0  
SHARING**

**Quick Start Guide**

## SYSTEM CONTROL

The SKM-04-PLUS may also be controlled via RS-232 commands. To use these commands, you must use HyperTerminal or an alternate terminal application. The settings for the connection are as follows: Baudrate **115200**; Data Bits **8**; Parity **None**; Stop Bits **1**; Flow Control **None**.

Once you have connected to the SKM-04-PLUS via Serial, you will see the SKM-04-PLUS information when the device starts up.

The following commands can be used for RS-232 with available keyboard hotkeys:

Command	HotKey	RS-232
All USB	[CT] [CT] [#] <CR>	// m [#] <CR>
KM Only	[CT] [CT] c [#] <CR>	// c [#] <CR>
USB Only	[CT] [CT] u [#] <CR>	// u [#] <CR>
Reset Software	[CT] [CT] r <CR>	// r [#] <CR>
Factory Defaults	[CT] [CT] f <CR>	// f <CR>
Get Port Status	N/A	// ?? <CR>
Switch resolution Channel: 1-4 Resolution: 1 (1080p), 2 (4K), 3 (2K), 4 (720p)	N/A	// ce [SB] [SKM #] [SB] [RES #]
Mouse control speed (per resolution type) X and Y axes set in percent [0-500]	N/A	// mm [SB] [RES #] [SB] [X #] [Y #]
Get resolution/mouse info	N/A	// rl <CR>

### CHART KEY



[CT] = Ctrl  
<CR> = Carriage Return (Enter Key)  
[SB] = Space Bar

## HARDWARE INSTALLATION


1. Ensure that power is turned off or disconnected from the unit and the computers.
2. Use a USB cable (Type-A to Type-B) to connect a USB port on each computer to the respective USB ports on the unit.
3. Connect a USB keyboard and mouse in the two USB console ports.
4. Power on the KM by connecting a 5VDC power supply to the power connector.
5. Turn on all the computers.

**Note:** You can connect up to 4 computers to the 4 port KM.

## Smart-AM

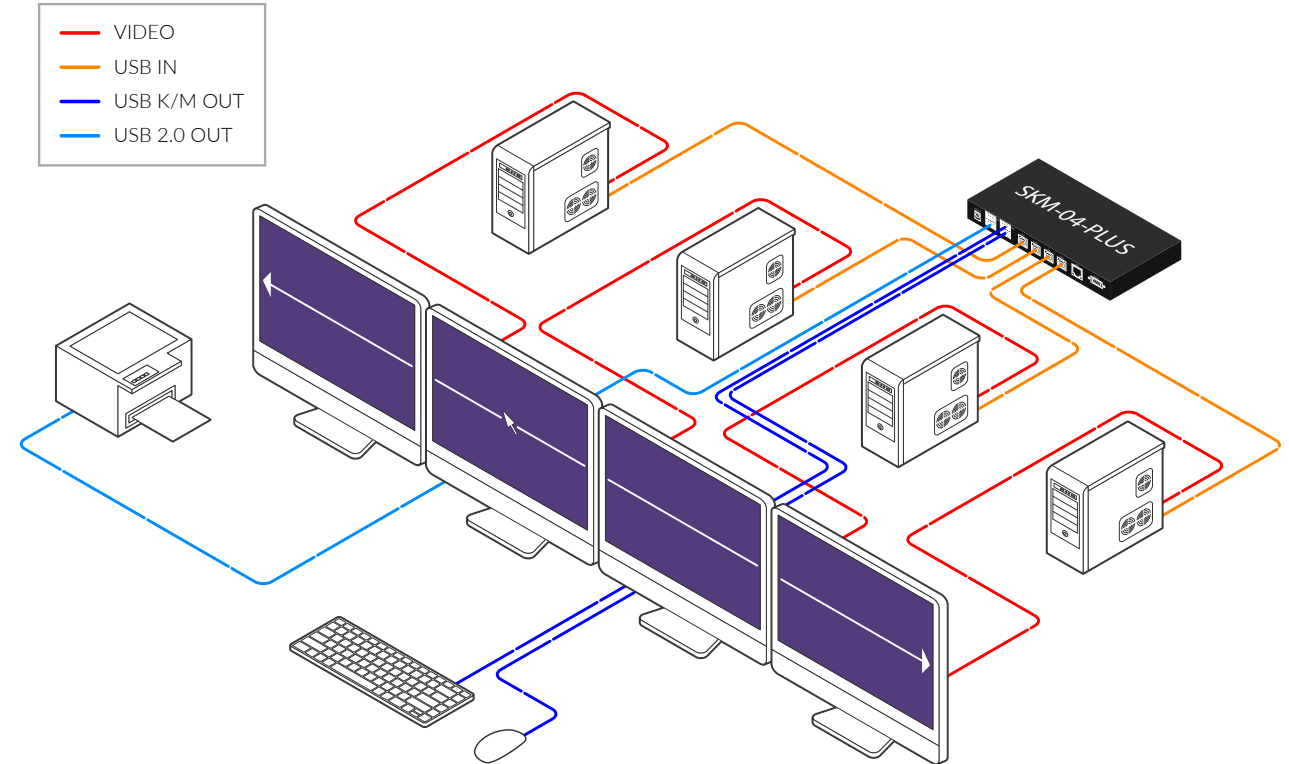

SKM-04-PLUS Back Panel



SKM-04-PLUS Front Panel